

Pro Convert IP to USB Plugin

Overview	1.1
IPToUSB_DeviceInfo	1.2
IPToUSB_ethernet_network_config	1.3
IPToUSB_factory_reset	1.4
IPToUSB_factory_reset_permission	1.5
IPToUSB_General	1.6
IPToUSB_Info	1.7
IPToUSB_Login	1.8
IPToUSB_ndi_config_get	1.9
IPToUSB_ndi_config_set	1.10
IPToUSB_network_card_info	1.11
IPToUSB_set_device_name	1.12
IPToUSB_source_add	1.13
IPToUSB_source_delete	1.14
IPToUSB_source_list_get	1.15
IPToUSB_source_select	1.16
IPToUSB_source_update	1.17
IPToUSB_stream_status_get	1.18
IPToUSB_summary_get	1.19
IPToUSB_usb_mode_get	1.20
IPToUSB_usb_mode_set	1.21
IPToUSB_usb_network_config	1.22
IPToUSB_video_config_get	1.23
IPToUSB_video_config_set	1.24

IPToUSB_DeviceInfo

Get the device information.

SIMPL+ file name

IPToUSB_DeviceInfo.usp

Category

system

Associated API

[device-info](#)

Remarks

IPToUSB_ethernet_network_config

Configure the Ethernet.

SIMPL+ file name

IPToUSB_ethernet_network_config.usp

Category

network

Associated API

[if-set](#)

Remarks

IPToUSB_factory_reset_permission

Judge whether the factory reset permission is enabled.

SIMPL+ file name

IPToUSB_factory_reset_permission.usp

Category

common

Associated API

[factory-reset-permission](#)

Remarks

